Dear Customer,

We Congratulate you for having purchased Tower speaker system. We are confident that you will enjoy it. This card is a key to service and warranty.

Terms & Conditions of Warranty

(1) This set is warranted against defective parts/ components and faulty workmanship for a period of 1 year from the date of purchase.

(2) **One year offsite warranty is applicable on this product from the date of purchase.**

(3) This warranty covers only the repair and does not entitled you for replacement of this product.

(4) The customer need to provide the original GST Bill of the purchase proof to the attending service technician.

(5) This warranty does not cover any form of damage resulting from dust, foreign object, fire, water, input voltage beyond specifications, riot, mishandling, commercial use, ligtening, flood or any act of natural calamity.

(6) Company will not accept any responsibilty for damage arising out of unauthorized modifications or alternations, repairs, or mishandling inccured during transit.

(7) This warranty does not cover the cost of transportation of the product from the place of installation to the service.

(8) The warranty is not valid if the Serial No./ Chasis No. is deleted, defaced or altered.

(9) All the conditions of the warranty are invalid if the product is used for commercial purpose or for any purpose other than home entertainment.

(10) The company shall not be liable for any delay from causes beyond its reasonable control in repairing due to non availability of any component, accessory, labor problem, public movement, war and any unavoidable circumstances.

WARRANTY CARD TOWER SPEAKER SYSTEM

MODEL	SERIAL NO.

CUSTOMER'S NAME .....

Address .....

.....

Bill No. ..... Bill Date .....

DEALER STAMP AND SIGNATURE

Manufactured for & Marketed by:

S R Telecom & Mobile

Satyanarayan Bhawan, Hanuman Lane, Sitabuldi, Nagpur- 440012

Email: support@goatdigital.co.in, Call Us On: +91 8208985581

GOAT DIGITAL

THUNDERBOLT-160



USER MANUAL

USER MANUAL

Specifications	
Output Power	16000W P.M.P.O
RMS	160W
Amplifier Type	Class AB
Woofer Size	5.25", 8Ω x 1
Speaker Size	3", 2Ω x 4
Bass Control	Rotary Type
Volume Control	Rotary Type
Power Source	AC 220-230V, 50Hz
Height	28"
Package Content	1N Main Unit, 1N Remote, 1N Wired Mic, 1N User Manual/Warranty Card

Caution :

1. Do not put the speaker in high temperature or humid environment, avoid water and strong shock.
2. Do not open the cabinet to avoid electric shock or other accidents, please ask for professional help if any needs for repair.
3. In case of fragment or liquid fallen into the cabinet, please cut off the power immediately and ask for professional help.
4. When receiving high output signal, please do not turn the volume to maximum to avoid sound distortion.
5. For indoor use only.
6. Do not expose to dropping or splashing.
7. Do not place any objects filled with water over the speaker.
8. Do not block the ventilation holes.

Features:

1. With built-in amplifier design, the system reflects the purity of sound and creates powerful sound effect.
2. Ideal for TV, PC, Laptop, Smart Phones etc.
3. Volume & bass control makes it easy to adjust your demanding sound level

Usage:


1. Wired Mic can be use by inserting plug into the socket given at the back plate of the tower speaker.
2. Connect one end of audio plug to the audio output plug of PC or 2 X RCA audio plug to other audio sources..
3. Make sure all cables are connected correctly, then connect the power cord to AC power.

How to use the Bluetooth Connect (BT)

1. Select the audio input the Bluetooth connect status.
2. Search Bluetooth connect device name “THUNDERBOLT 160”.
3. Connect the Bluetooth (BT).

NOTE :- Microphone volume and Echo is control through equalizer button on remote (EQ).

REMOTE CONTROL OPERATION INSTRUCTION

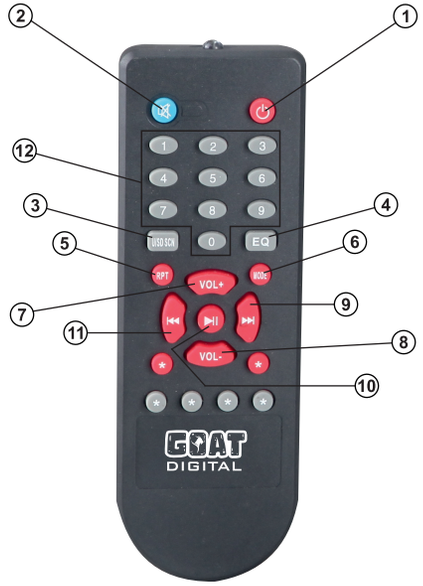

1. **POWER KEY :** Power ON/OFF available in all modes.
2. **MUTE KEY :** Mute available in all modes.
3. **U/SD SCAN KEY :** To scan channels in FM mode.
4. **EQ KEY :** For controlling MIC volume & Echo.
5. **RPT KEY :** Press for repeating songs in USB mode.
6. **MODE KEY :** To select BT, USB, AUX, FM mode.
7. **VOL + KEY :** To increase sound in all modes.
8. **VOL - KEY :** To decrease sound in all modes.
9. **⏭ KEY :** Press to select next song.
10. **⏯ KEY :** Play/Pause the song in BT , USB , AUX mode.
11. **⏮ KEY :** Press to select previous song.
12. **0 TO 9 NUMBERING KEYS**

CONTROL PANEL FUNCTION INSTRUCTION

1. **USB INPUT KEY**
2. **V+/NEXT KEY :** Press shortly to select the next song in USB mode. Press shortly for TU+ in FM mode. Long press will increase volume level in all modes.
3. **V-/PREVIOUS KEY:** Press shortly to select the previous song in USB mode. Press shortly for TU- in FM mode, long press will decrease volume in all modes.
4. **PP/SCAN KEY:** Press shortly to play/pause the song in USB & BT mode & to scan channels in FM mode.
5. **MODE KEY:** To select BT, USB, AUX, FM mode.
6. **AUX :** To connect AUX Cable
7. **Bass :** Rotary Type Bass Control.
8. **Treble :** Rotary type Treble Control.
9. **VOLUME KEY**: Rotary type main volume control.
10. **MIC : To Connect Mic Cable.**

